

## Changing Your User Code

Users with access to this option can change their own User codes. User codes are unique to each user and can be 4, 5 or 6 digits long.



**NOTE** Only the User code that is entered to access the change code menu will be changed.

**Before changing your code, it is vital that you memorise or write down the new code you are about to program. Failure to remember your code will require an engineer visit to re-program a new code for you. This may incur a call-out charge.**

### To change your User code, proceed as follows:

Enter the User code that requires changing ( ? ) ( ? ) ( ? ) ( ? )

Do you want to  
Arm System?

Press ( Menu ) / ( Menu )

Do you want  
User Menu?

Press ( Yes ) / ( Yes )

Do you want to  
View Event Log?

Press ( 2 )

Do you want to  
Change Code?

Press ( Yes ) / ( Yes )

Enter New Code>  
\_\_\_\_\_

Enter a new 4, 5 or 6-digit User code ( ? ) ( ? ) ( ? ) ( ? )

Enter New Code>  
--8989

Press ( Yes ) / ( Yes ) to accept the new code

Press ( Reset ) / ( Reset ) to exit the menu

The display will return to normal.