

To DISARM the System

The Entry time is divided into two sections, the Entry time and the 2nd Entry time. If the Entry time expires, an Internal alarm will occur and the 2nd Entry time will start. If the 2nd Entry time expires, an Intruder alarm will occur (all internal and external sounders).



It is perfectly normal for the 2nd Entry time to be programmed as zero, in which case, an Intruder alarm will occur as soon as the Entry time expires.

During Entry

To disarm the system, proceed as follows:

Enter the premises via the designated entry point

The entry tone will start

```
Areas in Entry >
ABC.....
```

Enter a valid User code

⓪ ⓪ ⓪ ⓪

The entry tone will stop

```
14:46.04P Tue 06
```

The system is now disarmed.

When Not in Entry

To disarm the system, proceed as follows:

The display will look something like this:

```
14:46.04P Tue 06
```

Enter a valid User code

⓪ ⓪ ⓪ ⓪

```
Do you want to
Disarm System?
```

Press ⓪

```
14:46.04P Tue 06
```

The system is now disarmed

To CANCEL the Exit Mode

Once the exit mode has been started you should leave the premise immediately, however, if for some reason you decide not to leave, the exit mode must be cancelled.

To cancel the exit mode, proceed as follows:

Enter a valid User code ⓪ ⓪ ⓪ ⓪

```
Do you want to
Cancel Exit?
```

Press ⓪/⓪

The exit tone will stop

```
Tue 06 Mar 2001
```

The exit mode has now been cancelled.