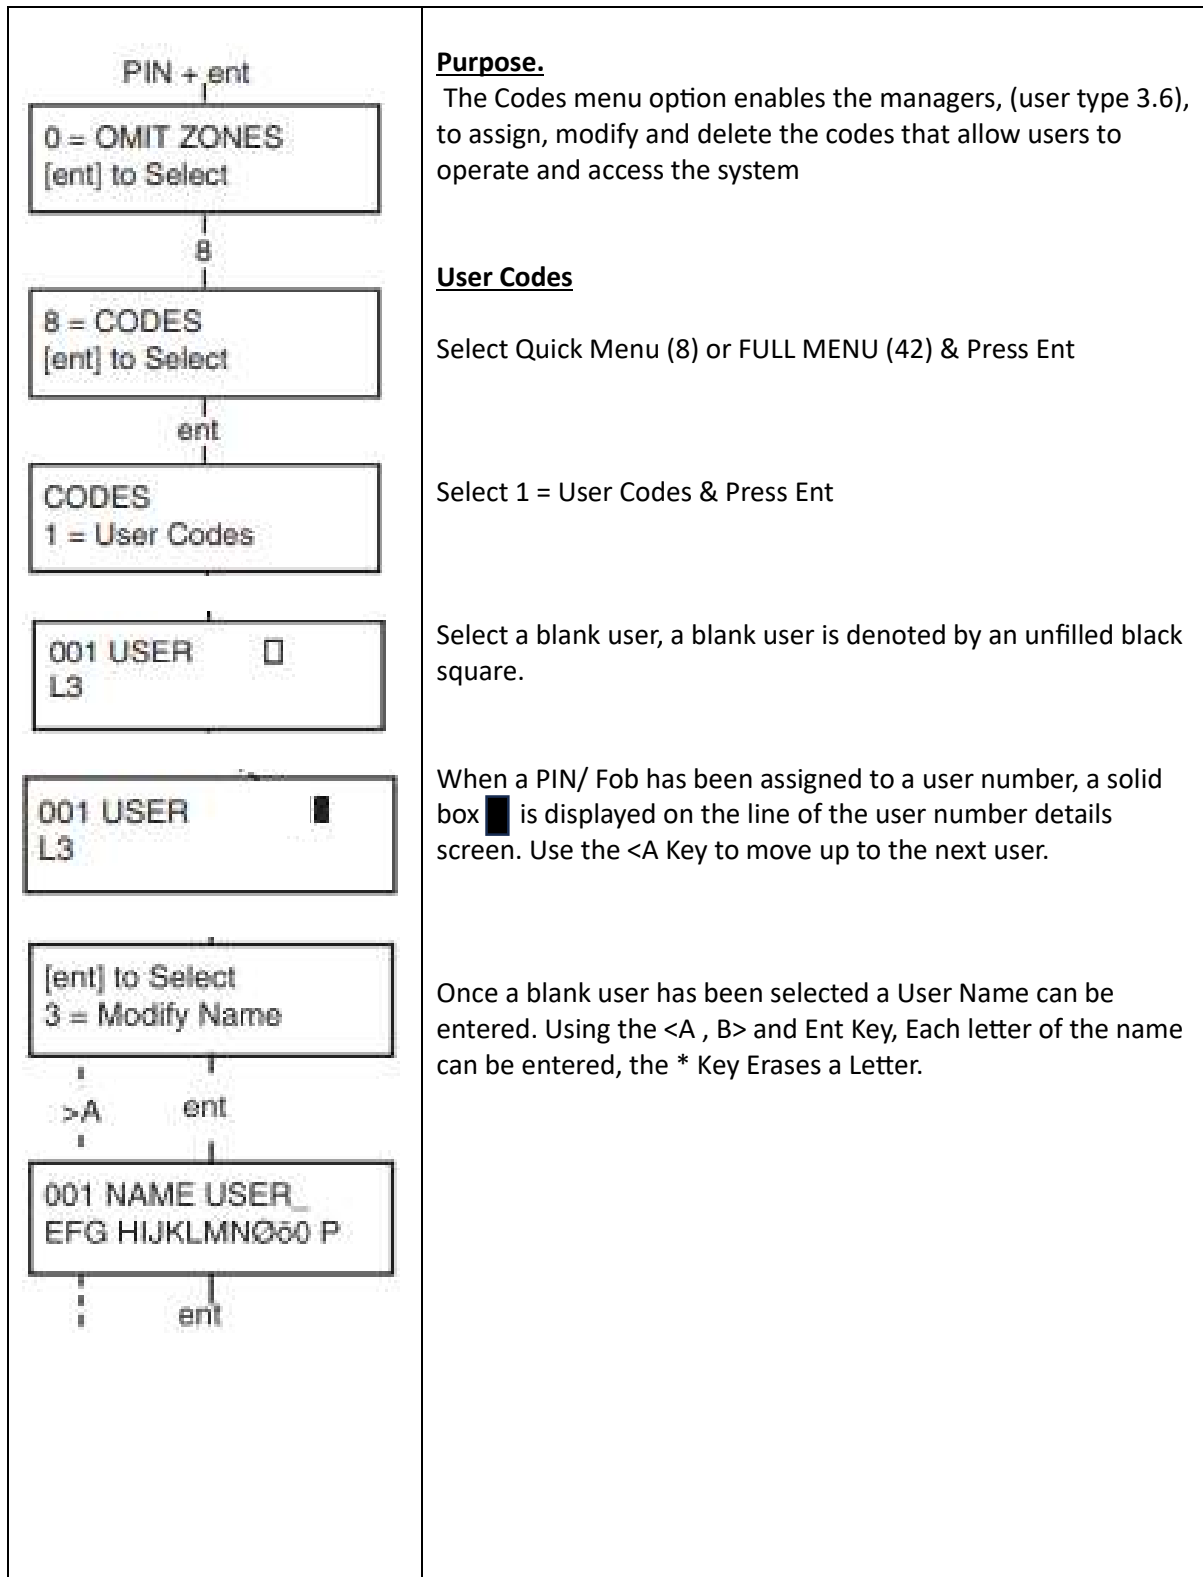


Programming Additional Fobs for Standard Arming and Disarming


[ent] to Select 7 = Card No ent Card No > Enter new Card number ent	Card Number. Each access card/tag/fob has a unique internal number which CANNOT be viewed. The number identifies the card/tag/fob to the system and references it to the user it has been assigned to. To Enter the card/tag/fob press the A and 1 keys simultaneously of the KeyProx and present the card/fob to the KeyProx reader within 5 seconds. The decrypted number in the card will be self learned onto the Galaxy panel and is displayed on the KeyProx.. 2. Press the ent key to save the programming and return to the previous menu.
[ent] to Select 8 = MAX Function ent MAX Function ★ ★ = NOT USED 1+2 (A>) MAX Function 12 = TIMED SET	Max Function. The MAX card can be assigned to a single menu option. The user must be authorised to access the menu option, either by the user level assigned or by having the menu option access type changed by the engineer. The default option is Not Used. A new option is assigned by scrolling using the A> or B< keys until the required option is displayed or directly entering the option number using the keypad digits. Select the function by pressing the ent key. We recommend that the MAX function is set to 12 = Timed Set. Keep pressing the ESC key until the display show the time/ date.