


Fire & Security Solutions

Omitting Zones

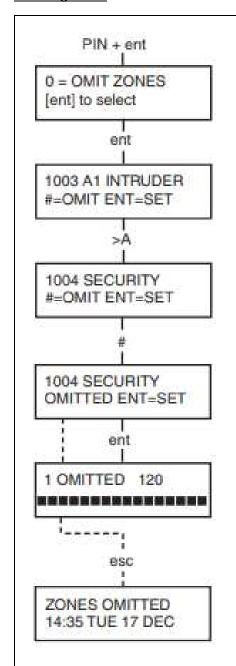

Purpose.

This option allows the user to omit zones before setting the system. Zones must be eligible for omission otherwise they will not be displayed.

Selecting Omit Zones.

Enter the QUICK MENU (0) or FULL MENU (11) The OMIT ZONES option is displayed. Press the ent key to select this option.

Viewing Eligible Zones.

When the Omit Zones option is selected the first zone eligible for omission is displayed. The eligible zones can be viewed by pressing the A> or B< keys. The zones eligible for omission can be rapidly viewed by holding down either of these keys.

Omitting Zones.

Once the zone to be omitted is shown on the display, press the # key. The display indicates that the zone is omitted. A> and B< keys can then be used to select other zones to be omitted using the same method.

Note: A zone is omitted from the system as soon as the # key is pressed. The system does not have to be set

Setting With Omitted Zones.

When the list of omitted zones is complete the setting routine is started by pressing the ent key. The system starts to set and the display indicates how many zones have been omitted. Alternatively the esc key can be used to return to the menu options. Zones that have been omitted remain omitted even after using the esc key.

Note: All zones omitted are recorded in the log against the user