

## Fire & Security Solutions

### To OMIT Zones



It is possible to exclude (omit) individual zones when arming i.e. if a zone is 'in fault'. Users with access to this function can only omit zones that have been programmed as 'Omittable'.



*If the zone can be omitted, there will be a star to the right of the zone number. Only zones that have the 'Omit' attribute assigned to them can be omitted.*

*A star will appear to the left of the zone number to indicate that the zone has been selected for omitting.*

*All omitted zones will be automatically reinstated the next time the system is disarmed, unless programmed otherwise.*

*To re-instate zones manually, simply follow the instructions again. However, when the  /  key is pressed this time, the zones will be re-instated.*

### To omit zones when arming, proceed as follows:

Enter a valid User code     and press  / 

```
Zone 001*Secure  
Front Door >
```

Enter a zone number    or use the  key to search

```
Zone 010*Active  
Lounge Detector >
```

Press  /  to omit the selected zone

```
Zone*010*Active  
is Omitted  
  
Zone*010*Secure  
Lounge Detctor >
```

Repeat for other zones if required

Press  /  when finished

```
Do you want to  
Arm System?
```

**Continue to arm the system as normal**

The selected zones are now omitted (the omit light will be on).