

Operating your Orisec Security System

This quick guide covers the everyday operation of your alarm system, for full details on system operation and programming, please refer to the 'Master User Guide'.

Full Arming Your Security System

Enter your code or present tag to access the user menu, then scroll down to 'Full Arm System' and press **Enter✓** or **✓**. The exit tone will sound and the keypad will instruct you to exit the protected area.

Part Arming your Security System (Part Arm 1)

Enter your code or present tag to access the user menu then scroll down to 'Part Arm 1'. Use the **◀/Omit** and **▶/Chime** keys to change the part arm mode (1, 2 or 3), then press **Enter✓** or **✓** to part arm. The exit tone will sound and the keypad will instruct you to exit the protected area.

Disarming your security system

Enter the premises or protected area via the designated entry point. The entry tone will sound, proceed directly to the keypad and present your tag. The entry tone will stop and the system is disarmed.

Area full arming

Enter your code or present tag to access the user menu, then scroll down to 'Area Full Arm'. Then use the **◀/Omit** and **▶/Chime** keys to toggle the selected area on or off. Once you have selected the areas that you would like to arm, press **Enter✓** or **✓** to confirm. The exit tone will sound and the keypad will instruct you to exit the protected area.

Resetting after an alarm or Fault

Enter your code or present tag to silence any internal and external sounders. The reason for the alarm or fault will then be displayed on the keypad screen. Enter your code or present the tag again, then scroll down to the 'Reset Alarms' option and press **Enter✓** or **✓**.

Omitting Zones

Enter your code or present tag to access the user menu, then scroll down to the 'Omit Zones' option and press **Enter✓** or **✓**. Use the **▲/Arm** and **▼/Part** keys to select the required zone then use the **◀/Omit** and **▶/Chime** keys to turn omit on or off. When you've finished omitting the zone(s), press the **Back←** / **←** or press and hold the **◀/Omit** key for 2 seconds to return to the user menu. If required, the system can be armed or part armed with selected zone(s) omitted by selecting the relevant arming function key.

Changing Your Code

Enter your code or present tag to access the user menu, then use the arrow keys to scroll down to the 'Change my code' option. Press **Enter✓** or **✓** to select, now enter your old passcode, if correct you will be prompted for a 'new code'. Enter your new code then press **Enter✓** or **✓**.

Turn chime on/off

Enter your code or present tag to access the user menu, then press and hold the **🔔/Chime** or **🔔** key. The area selection menu is displayed, choose the areas you want to chime then press the **Enter✓** or **✓** key.