

How to add the Orisec alarm to a new WIFI router.

1. Enter your customer code.
2. Scroll down to change settings Press the right-hand arrow key to enter.
3. Scroll down to 'Coms Modules'.
4. Scroll down to 'Wi-Fi settings'.
5. Enter the password for the router.

Then

6. Press the back button to go to where it shows comms modules
7. Scroll down to Wi-Fi status & checks and press Enter.
8. Press 'Clear' to scan for available networks.
9. Once the required network has been found, press 'Enter'.
10. When connected, the panel will display 'Press Tick to Disconnect'.
11. Press the back key to work your way out of the menus

