

To PART Arm the System

The system is **PART Armed**, when ONE OR MORE zones have been left OFF (omitted) i.e. the landing or a bedroom.



The system is only **Part Armed** when zones are omitted using the 'Part Arm' procedure (omitting zones manually (see page 23 for details) is not classed as **Part Arming**).

The bottom line of the display is programmable for each Part Arm.

Your Installer may have programmed the system so that it can be part armed by just pressing **1**, **2** or **3** followed by **Home** / **Part** if this is the case then there is no need to enter the User code below.

To part arm the system, proceed as follows:

Ensure that the premises are secure (all windows and doors not being omitted are closed) and the Ready light is on.

Enter a valid User code **?** **?** **?** **?**

```
Do you want to
Arm System?
```

Press **Home** / **Part**

```
Do you want:-
Evening arm
```

Use keys **1** - **3** to select the required part arm

```
Do you want:-
Bedtime arm
```

Press **✓** / **Yes** to arm normally or press **♪** / **Chime** to arm silently

The exit tone will sound (if silent arm has not been selected)

```
Areas in Exit >
A.....
```

Leave the protected area

When the system has armed, the exit tone (if sounding) will stop

```
Bedtime Arm
A.....
```

```
* PART ARMED *
Tue 06 Mar 2001
```

The system is now part armed.