

To DISPLAY the cause(s) of System Alerts (Alarms)

When silencing an alarm or unsetting the system after an alarm, the number of the zone(s) will be displayed on the keypad. If several zones were triggered, the display will scroll through each in turn.

After noting the cause of the alarm, the system can be reset as described in 'RESET After an Alarm' below.

System Alerts

When the system has faults to display, or has not been reset after an alarm condition, the display may show 'SYSTEM ALERTS'.

Enter a valid User code 

Any alarms or faults will be displayed. If several fault or alarm conditions have been triggered, the display will scroll through each in turn.

After noting the cause of the alarm or fault, the system can be reset as described in 'RESET After an Alarm' below.



NOTE

Some action may be required to clear the cause of the alarm or fault in order to successfully reset the panel.

To RESET After an Alarm



If the display shows 'SYSTEM ALERTS', follow the steps described in 'To DISPLAY the causes of System Alerts' above, before attempting to reset.

USER Reset

Once the alarm has been silenced (see above), the system will need to be reset.



NOTE

If the system has been programmed to be reset by an Engineer, pressing  /  will not return the display to normal, if this is the case see ENGINEER Reset (page 20) for details.

The system may have been programmed to be reset by Anti-code, if this is the case, see ANTI-CODE Reset (page 20) for details.

To reset the alarm, proceed as follows:

Enter a valid User code 

Do you want to
Arm system?

Press  / 

The external strobe will stop, the system will chime
and the display will return to normal.

ENGINEER Reset

If the system has been programmed to be reset by an Engineer following an alarm activation, you will still be able to silence the alarm by entering a valid User code (see page 20 for details).



NOTE

The system cannot be armed again until the alarm has been reset.

To reset the alarm, proceed as follows:
Contact the telephone number on the display (if programmed) or the telephone number on the last page of this User Guide.

ANTI-CODE Reset

If the system has been programmed to be reset using an Anti-Code following an alarm activation, you will still be able to silence the alarm by entering a valid User code (see page 20 for details).



The system cannot be armed again until the alarm has been reset.

To reset the alarm, proceed as follows:

Enter a valid User code (?) (?) (?) (?)

```
Press RESET for
Anti-code
```

Press (⏻) / (Reset)

The display will show a random code number i.e. 4281

```
Quote > 4281
Reply > _____
```

Contact the telephone number on the display (if programmed) or the telephone number on the last page of this User Guide and quote the random code number.

You will be given a 4-digit Anti-Code i.e. 5624

Enter the Anti-code that has been given to you (?) (?) (?) (?)

```
Quote > 4281
Reply > 5624
```

Press (✓) / (Yes)

If the Anti-code is correct, the keypad will chime to indicate that the system has been reset and the display will return to normal.