

Setting the System Time

The alarm system has a real time clock that is used to date and time stamp events that are recorded within the system Log. Users with access to this option will be able to set the Time on your alarm system.

To set the System Time, proceed as follows:

Enter a valid User code (?) (?) (?) (?)

Do you want to
Arm System?

Press (Menu) / (Menu)

Do you want
User Menu?

Press (Yes) / (Yes)

Do you want to
View Event Log?

Press (7)

Do you want to
Set System Time?

Press (Yes) / (Yes)

Enter New Time >
12:28 BST

Enter the new time (24 Hour format) (H) (H) (M) (M)

Enter New Time >
21:45 BST

Press (Reset) / (Reset) to change between BST and GMT

Enter New Time >
21:45 GMT

Press (Yes) / (Yes)

Press (Reset) / (Reset) to exit the menu

The display will return to normal.

Setting the System Date

The alarm system has a real time clock that is used to date and time stamp events that are recorded within the system Log. Users with access to this option will be able to set the Date on your alarm system.

To set the System Date, proceed as follows:

Enter a valid User code (?) (?) (?) (?)

Do you want to
Arm System?

Press (Menu) / (Menu)

Do you want
User Menu?

Press (Yes) / (Yes)

Do you want to
View Event Log?

Press (8)

Do you want to
Set System Date?

Press (Yes) / (Yes)

Enter New Date >
06/03/01

Enter the new date (D) (D) (M) (M) (Y) (Y)

Enter New Date >
24/05/01

Press (Yes) / (Yes) when finished

Press (Reset) / (Reset) to exit the menu

The display will return to normal.