




Operating Your Monitored Texecom Security System

This quick guide covers the everyday operation of your alarm system, for full details on system operation and programming, please refer to the 'Master User Guide'.

Full Arming Your Security System

Enter your code or present tag to access the user menu, the display will say "**Do you want to Arm System**". Press . The exit tone will sound and the keypad will instruct you to exit the protected area.

 

Part Arming your Security System (Part Arm)

Enter your code or present tag to access the user menu then press . Use the down arrow key to change the part arm mode (1, 2 or 3 options), then press . The exit tone will be silent and the keypad will instruct you to exit the protected area. After 30 seconds the alarm will beep to indicate it is part armed.

 
Disarming your security system


Enter the premises or protected area via the designated entry point. The entry tone will sound, proceed directly to the keypad and present your tag. The entry tone will stop and the system is disarmed.

Area full arming

 
 
 

Enter your code or present tag to access the user menu, then press . Then press 1, 2, 3 or 4 depending on what areas have been set up. Once you have selected the areas that you would like to arm, press  confirm. The exit tone will sound and the keypad will instruct you to exit the protected area.

Resetting after an alarm or Fault

Enter your code or present tag to silence any internal and external sounders. The keypad will display "**system alerts**". The reason for the alarm or fault will then be displayed on the keypad screen. Enter your code or present the tag again. The keypad will say "**Do you want Arm System**". Press the  button on the keypad. The display will now show the company name and time and date.

The system may need an "**Anti-code reset**". In this instance press  when prompted on the keypad. Call your monitoring station and quote the code on screen. They will then give you a code to reset the system. If you know why the system activated carry on using as normal. If you are unsure why then call the alarm company for further guidance.

 
Omitting Zones

Enter your code or present tag to access the user menu, then press the  key. Use the up and down arrow to scroll to the zone you want to omit. Press the  key again to omit the zone. The omit LED will illuminate on the keypad. When you've finished omitting the zone(s), press the  key. If required, the system can be armed or part armed with selected zone(s) omitted by selecting the relevant arming function key or by pressing .

Changing Your Code

Enter your code or present tag. To access the user menu press  then . Use the arrow keys to scroll down to the 'Change code' option. Enter your new passcode and press . Press  to exit out of the menu.

Turn chime on/off

Press the  key on the keypad to turn on/off the chime. This will only work if the zone/zones have been programmed by the engineer prior. If you would like this option, speak to the service engineer when next onsite.

