

Unsetting the System

PIN + ent Galaxy 520 V5.00 15.49 MON 18 Nov 	Normal Entry. Unsetting starts immediately when the FINAL door is opened or an ENTRY zone is activated. The sounder pulses slowly and the user must go directly to the keyprox and present a valid keytag or card to the prox reader to unset the system. If using a keypad code enter a valid PIN, followed by ent. If using a KEYTAG or CARD, present the token to the bottom right of the keypad, the alarm will silence and the system is now UNSET. Straying From the Entry Route. Go directly to the keypad when entering the building. If the user strays into a protected area and activates a zone, an alarm will occur and the user will need to carry out a reset of the system. Slow Entry. Enter a valid PIN or present your token before the entry time expires. If the entry time expires before a valid PIN/ token is entered, then an alarm will occur. The sounder begins to pulse quickly when 75% of the entry time has elapsed indicating time is running short.
---	---

Cancelling an alarm

PIN + ent 4 ALARMS [<] [>] to View CALL MANAGER RESET REQUIRED CALL ENGINEER RESET REQUIRED	Cancelling Alarms. To cancel an alarm, enter a valid PIN or present you token followed by ent at the keypad. A Message The keypad displays details of the zone activated. When more than one zone is activated, details can be viewed using A > or < B. Press ent to return to the banner. Certain types of alarms, once cancelled, require a code with the appropriate reset authorisation to be entered. The system prompts for a valid reset code by displaying Manager Reset Required or Engineer Reset Required on the keypad
--	--